




Palm Zire 31 Keys Replacement

Written By: Gabe

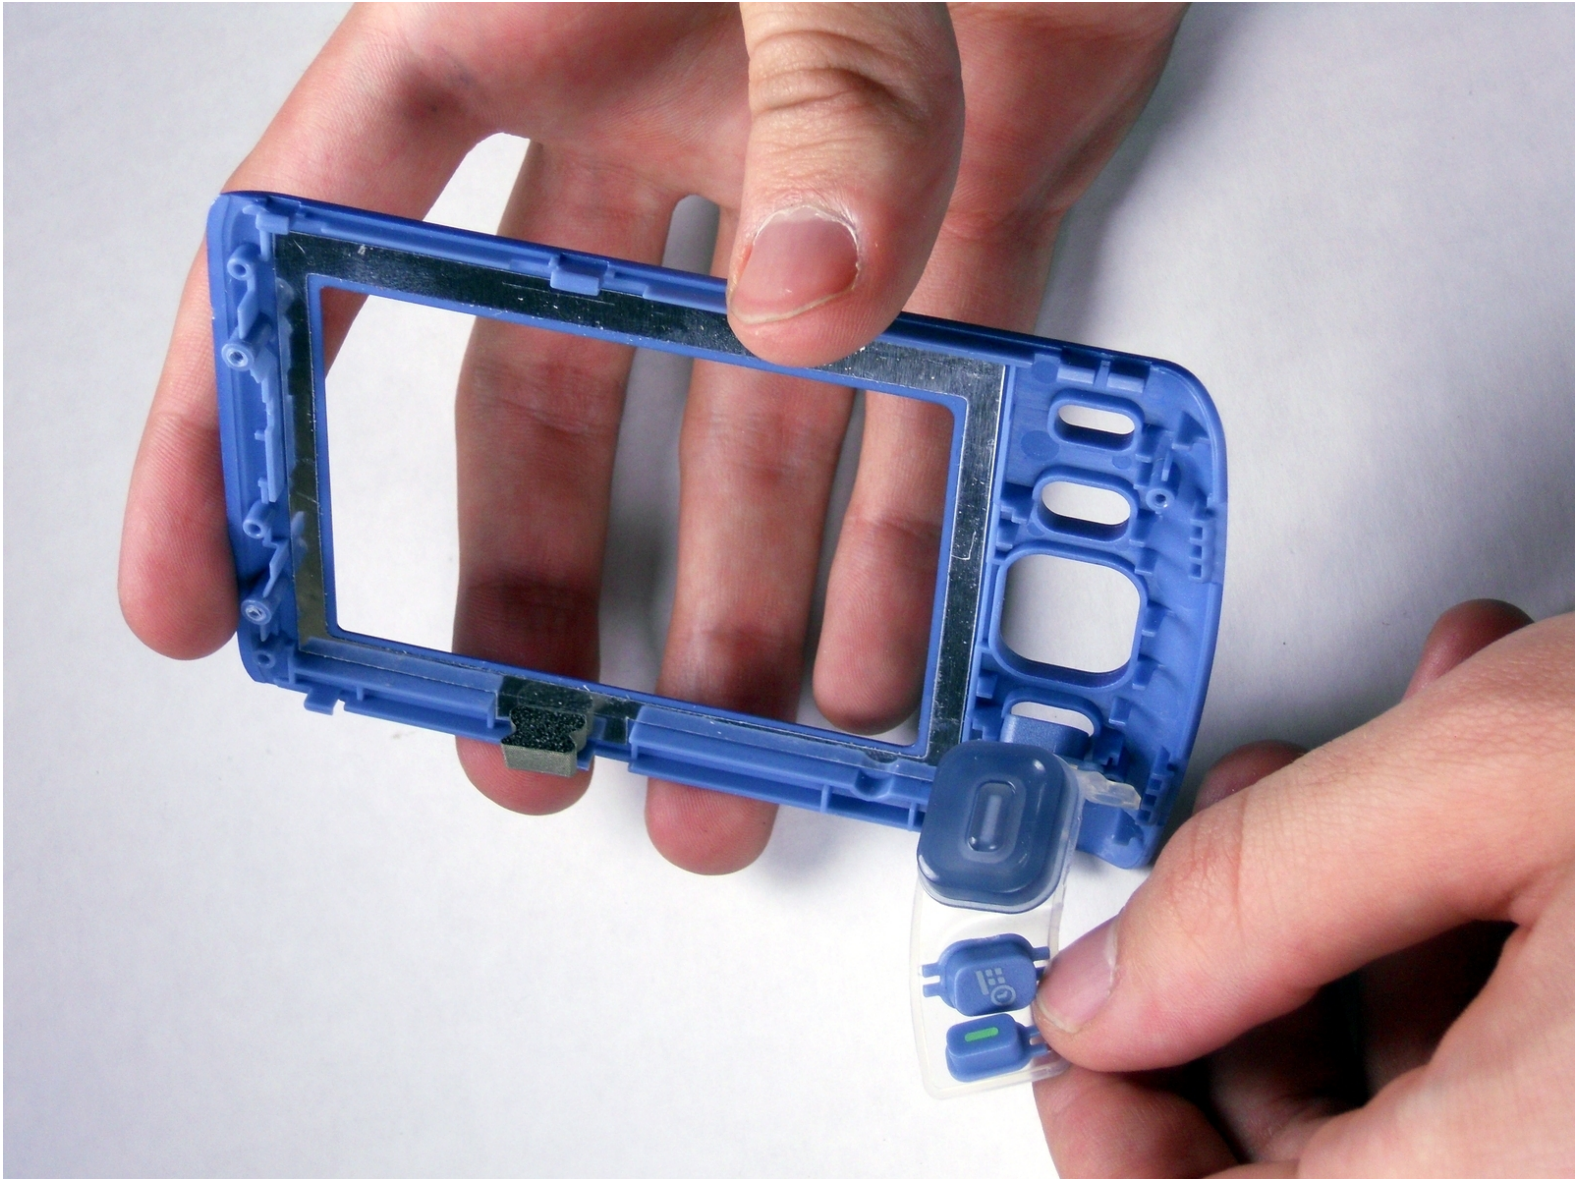



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — Case




- Unscrew the two 7.35mm Torx T6 screws.

Step 2




- Using the flat end of the spudger, carefully pry the black cover on the top from the blue front cover.

Step 3

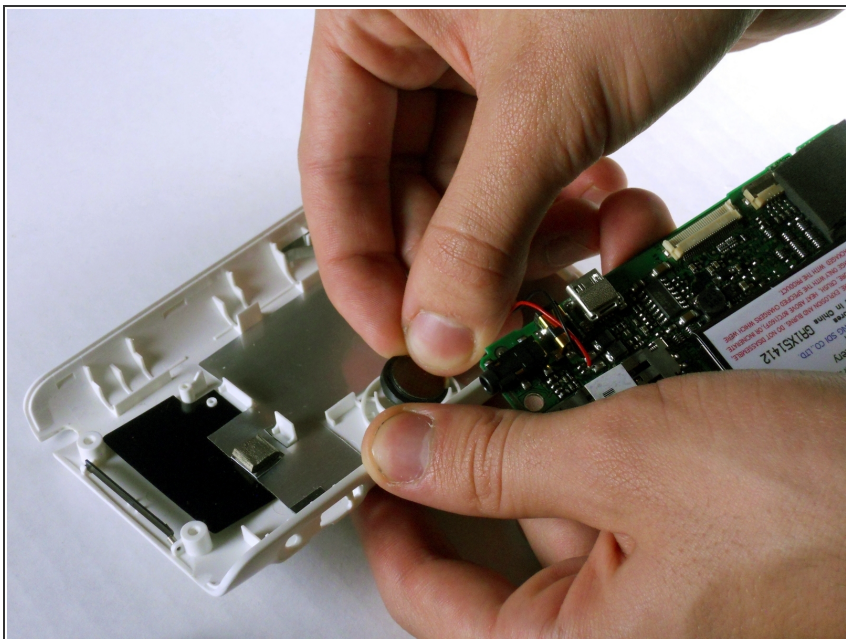


- Carefully remove the speaker from the back white cover by just pulling it gently. It is glued on.

Step 4

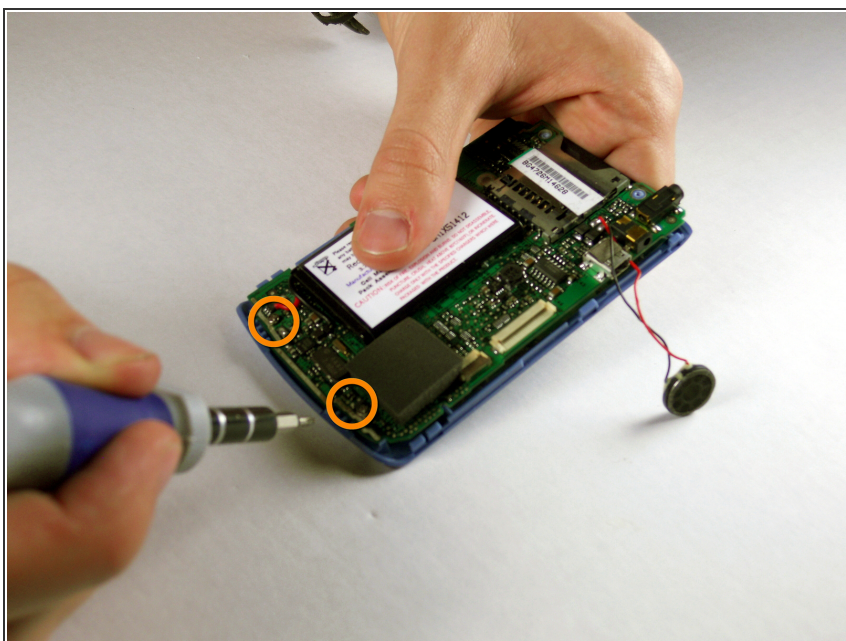

- Unscrew the #00 5.75mm Phillips screws from the bottom of the motherboard. The front blue panel should fall right off.

Step 5 — Keys

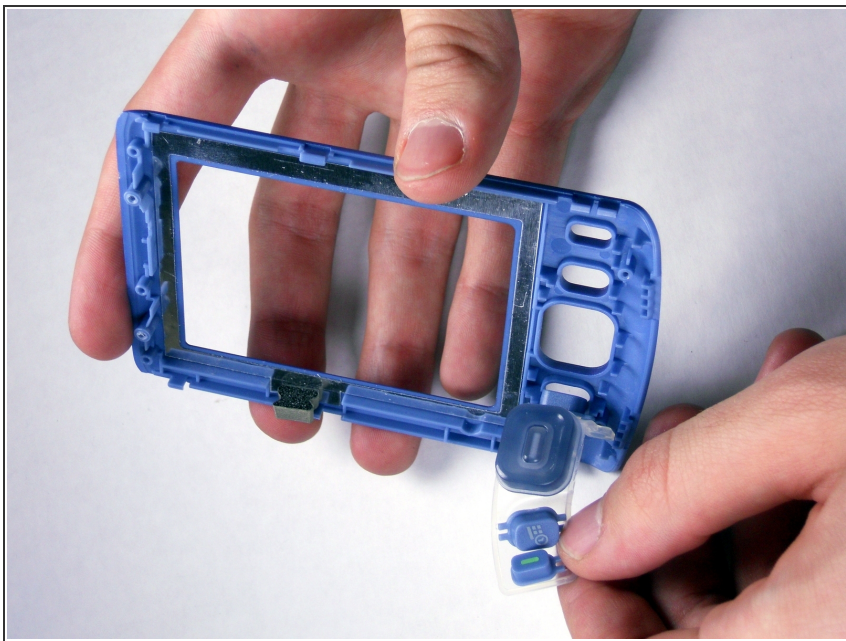

- The blue keys will either come off with the blue front case, or stay on the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 04:20:43 AM.